Print on Plain White Paper (Part No. 122919)

Installation Instructions

9A60 Foot Section Belt Mounts Models 111 and 411-001 thru 411-008

Installation for Model 411-001 thru 411-008

1. Remove plastic cover from bottom of foot section (1, Figure 1) of Model 411-001 thru 411-008.

2. Align template (2) with back edge and bottom lip of foot section (1). Drill two 7/32 inch diameter holes using template as guide. Repeat on opposite side. After you've drilled the holes, discard the template.

3. Install belt mount (3) on foot section (1) and secure with washers (4), screws (5), and nuts (6). Repeat for remaining belt mount.

Installation for Model 111

1. Find the two pairs of holes on the bottom of the foot section (1, Figure 2).

2. Install belt mount (2) on foot section (1) and secure with washers (3), screws (4), and nuts (6). Repeat for remaining belt mount.

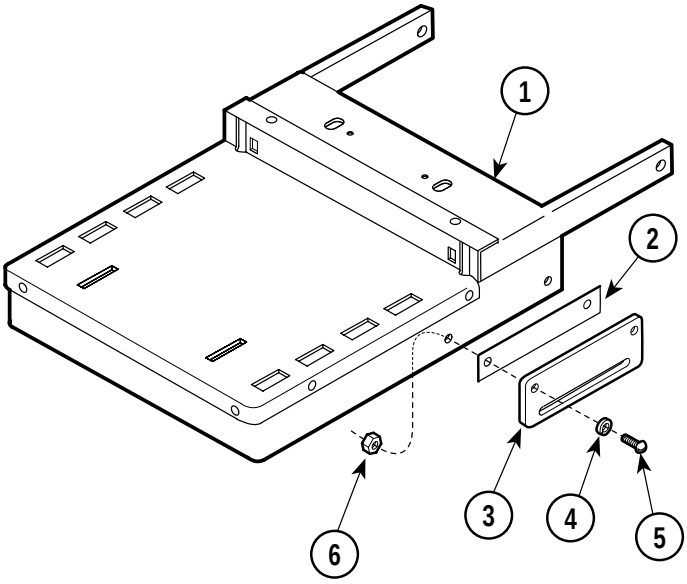

FIGURE 1: FOOT SECTION MODEL 411-001 THRU 411-008

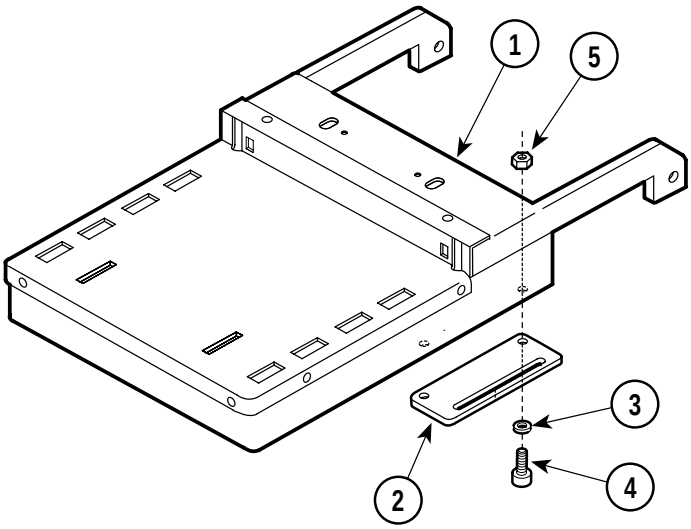

MA285700

FIGURE 2: FOOT SECTION MODEL 111

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
937-526-3662 TELEX 288007 FAX 937-526-5542

© Midmark Corporation - 1995